




## CLEANING

We recommend cleaning the respirator **AFTER EVERY USE**. Clean the power unit and accessories separately. Disassemble the mask, neck pad and harness from the Power Unit before cleaning.

### SILICONE MASK, HARNESS and NECK PADS

For these parts, use one of the methods below. After cleaning allow the mask to air dry and check the valve before use.

**DO NOT use high temperature devices such as hair dryers. Check the mask valves before use.**

Method 1	Method 2	Method 3
Use an alcohol-free wipe to clean the surface of the mask	Hand wash in warm soapy water and rinse	Dish Washer with standard dishwasher detergent
		

### THE POWER UNIT

For the Power Unit, use a damp cloth to wipe out the surface and allow to dry. **DO NOT submerge the power unit in water or washed in running water, or use harsh or abrasive cleaners.** Air dry the power unit in a clean environment.



## CARE

**EACH MONTH:** We recommend **INSPECTING** the respiratory for damage, cracks or missing parts. Please check the mask exhalation valve. If tearing or distortion of the valve, the exhalation valves should be changed.

**EVERY 6 – 12 MONTHS:** Harness and neck pads should be replaced depending on the level of use, every 6-12 months. The masks are made of silicone and resilient to aging and wear and tear. Close inspection of the mask should be conducted at least annually. The Respiratory Protection Standards recommend a fit test annually to confirm the correct fit of the mask.

## CHARGING AND STORAGE

Charging: 0°C to 35°C in a dry and protected space

Storage: -10°C to +35°C (-4°F to +131°F) at <90% relative humidity. Away from direct sunlight

Refer to the **ONLINE TRAINING PROGRAM** or email [sales@paftec.com](mailto:sales@paftec.com).