

DIRECTIONS FOR USE

Dy-Mark

2-Wheel Spot Marking Handle Ref Code: 40090110

STEP 1

Insert aerosol can into can holder as shown in the orientation below.




STEP 2

Continue to insert the aerosol can into the can holder until it slides over the spring bracket & you hear a clicking sound.



STEP 3

Rotate the aerosol can and/or the trigger actuator to ensure the trigger cap is aligned with the trigger actuator.

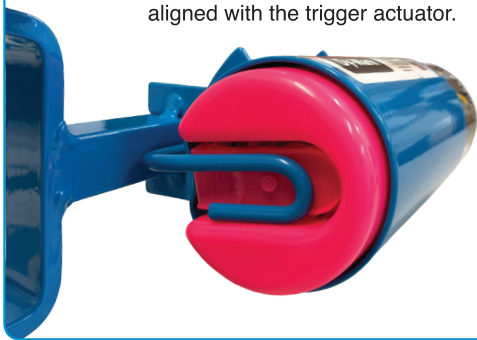

STEP 4

Pull trigger to spray.



Example of how to use the 2-Wheel Spot Marking Handle.

Note: Only compatible with the following products which have the upright/inverted spray nozzle (Trigger cap), as shown below:

